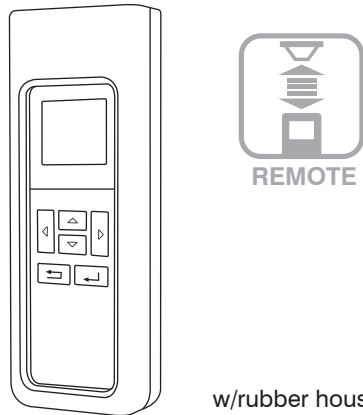


TRANS

SRP-280

TRANS Sensor Remote Programmer

OPERATION INSTRUCTIONS



w/rubber housing

SPECIFICATIONS

Power supply	2 x AAA 1.5V battery, Alkaline preferred
Rubber housing	SRP-280 must be installed in housing
Display unit	128 x 96 dot matrix LCD
Communication	940 nm Infrared Tx & Rx
Upload range	Up to 10 m (33 ft.)
Download range	Subject to the type of sensor applied
Uploading time	Approx. 6 sec.
Downloading time	Approx. 10 sec.
LCD auto-off time	Approx. 1 min.
Op. temperature	0°C~50°C (32°F~122°F)
Dimensions	130 x 50 x 21 mm (5.1" x 2" x 0.8")

WARNING

Remove the batteries from compartment if the remote will not be used in 30 days.

OVERVIEW

The SRP-280 is a universal two-way IR remote programming device designed to provide easy configuration of the remote programmable TRANS sensors from IR-TEC. This handheld programmer not only allows you to upload the new setting to the sensor, but also to download the current settings of the installed TRANS remote sensor from the floor via intuitive keypad operation.

Four EZ-SET profiles with factory preset parameters can be recalled, changed, and/or saved for quick setting of multiple sensors with identical parameters. Through successful download, the available settings of the installed sensor will be shown on the LCD with its current settings. Not-applicable settings will display as N/A.

The SRP-280 can also be used as a remote controller to manually turn on and off the light controlled by the TRANS remote sensor. To ensure correct commissioning and setting, please carefully read through this instruction before operating.

KEY DESCRIPTIONS

KEY	FUNCTION
	UP <ul style="list-style-type: none">Enter into UPLOAD pageSelect the setting bar (up)
	DOWN <ul style="list-style-type: none">Enter into DOWNLOAD pageSelect the setting bar (down)
	LEFT <ul style="list-style-type: none">Turn the light ON (auto-off)Change setting (decrease)
	RIGHT <ul style="list-style-type: none">Turn the light OFF manuallyChange setting (increase)
	ENTER <ul style="list-style-type: none">Confirm the commandUpload setting
	BACK <ul style="list-style-type: none">Back to previous page

NOTE

The SRP-280 is a universal remote programmer with ALL available settings and parameters for TRANS remote sensors. Some settings and parameters may not be available on specific type of sensor under certain control mode. Please refer to the installation instruction of the sensor for the available settings and control options.

BASIC OPERATION

REMOTE INFO

HW: V .
FW: V .
PF: V .

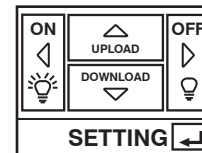
PRESS ANY KEY

To operate the SRP-280 TRANS Sensor Remote Programmer, correctly install two AAA batteries into the compartment. A startup page will display the remote info for 1 minute. You can press any key to enter into the MAIN MENU immediately. Under the MAIN MENU and respective setting pages, use the keys to navigate, select, and enter the settings of the sensor as instructed.

NOTE

- The LCD will automatically shut off in 1 minute after the last key operation to conserve battery power. Pressing any key will wake up the LCD to the last page immediately. Replace with two new batteries when "low battery" sign appears after LCD wake-up.
- To avoid changing the setting of nearby sensor, always execute upload and download right under the target sensor.

MAIN MENU



The MAIN MENU provides a quick selection of the following operations by pressing the respective keys.

- To enter the SETTING page, press
- To enter the UPLOAD page, press
- To enter the DOWNLOAD page, press
- To turn on the light and resume to sensor control, aim at the sensor and press
- To turn off the light manually, aim at the sensor and press

SETTING

The SETTING page contains all available settings and parameters for TRANS remote sensors. It allows you to change the available control, settings, and operation of the sensor from factory default or current settings.

Change a single setting of sensor(s)

- Enter the SETTING page, and navigate to the desired setting by pressing or .
- Press or to select the new parameter.
- Aim at the target sensor and press to upload the new setting.
- To change the same setting for more sensors, repeat step 3 on all others.

Change multiple settings of sensor(s)

- Enter the SETTING page, and navigate to the first setting by pressing or .
- Press or to select the new parameter.
- Move to the next setting and select the new parameter as step 2.
- Repeat step 3 to select all parameter settings.
- Press and enter into the UPLOAD page.
- Select CURRENT SETTING and press to confirm. Aim at the target sensor and press again to upload the new settings.
- To change more sensors with the same settings, repeat step 6 on all sensors.

Set/Change the SmartDIM level

- Enter the SETTING page, and navigate to the HIGH DIM by pressing or .
- Select the HIGH DIM setting at SmartDIM by pressing or .
- Press to select the SmartDIM level setting.
- Aim at the sensor and press to decrease, or to increase the SmartDIM level.
- Once the desired ambient light level reaches, aim at the sensor and press to confirm the setting.

NOTE

- Once SmartDIM is selected, the LOW DIM setting will be disabled.
- The connected light will flash (on and off two times) to acknowledge a successful SmartDIM setting. Do NOT execute any upload/download operation while flashing.
- Press and hold or will change the lighting level in faster speed.



www.irtec.com

P/N: 058-28001-006



Printed in Taiwan

This product may be covered by one or more U.S. patents or patent applications. Please visit www.irtec.com for more information.










About EZ-SET profile






The SRP-280 comes with a DEFAULT and four EZ-SET profiles with factory preset control mode and parameters. You may use any applicable profile or recall an existing profile, change with desired parameters and save as a new EZ-SET profile to configure the installed sensors.

PROFILE	DEFAULT	EZ-SET 1	EZ-SET 2	EZ-SET 3	EZ-SET 4
CONTROL	OSLATO	ON/OFF	OSO	OSLA	OSLATO
AMBIENT LUX	DISABLED	DISABLED	N/A	40 LUX	100 LUX
OFF DELAY	10 MIN	10 MIN	3 MIN	5 MIN	5 MIN
TIME OFF	10 MIN	N/A	N/A	N/A	3 MIN
HIGH DIM	100%	SmartDIM MAX 	70%	70%	SmartDIM MAX 
LOW DIM	30%	-	30%	30%	-
RAMP UP	INSTANT	INSTANT	INSTANT	INSTANT	INSTANT
FADE DOWN	SOFT	SOFT	SOFT	SOFT	SOFT
DALI POWER	ENABLED	ENABLED	ENABLED	ENABLED	ENABLED
LED INDICATOR	ENABLED	ENABLED	ENABLED	ENABLED	ENABLED
VM-TB	N/A	N/A	N/A	N/A	N/A
VM-TA	N/A	N/A	N/A	N/A	N/A
SENSITIVITY	HIGH	HIGH	HIGH	HIGH	HIGH
ON DELAY	N/A	N/A	N/A	N/A	N/A

Save as a new EZ-SET profile







1. Enter the SETTING page, and navigate to the desired setting by pressing  or .
2. Set the parameter of selected setting by pressing  or .
3. After all parameters are set, navigate to SAVE AS section.
4. Select the profile (EZ-SET 1, 2, 3, 4) by pressing  or .
5. Press  to save the settings in the selected EZ-SET profile.


Recall an EZ-SET profile

1. Enter the SETTING page, and navigate to the RECALL by pressing  or .
2. Select the profile you want to recall by pressing  or .
3. Press  to recall the selected EZ-SET profile.

NOTE: The DEFAULT profile can be recalled and used as a template for changing parameters, and saving as a new EZ-SET profile.

Resume the remote/sensor with factory default

1. Enter the SETTING page, and navigate to the DEFAULT by pressing  or .
2. Select REMOTE or SENSOR by pressing  or .
3. Press  to enter the confirmation page. Select YES and press  again to activate default process.



NOTE: To resume an installed sensor with factory default settings, aim at the sensor while press .

WARNING: All existing EZ-SET profiles stored in the remote will be replaced with factory default settings after executing step 3.

UPLOAD

The upload function allows you to configure the sensor with all settings in one operation. You may select CURRENT SETTING or any EZ-SET profile for uploading. CURRENT SETTING includes all existing settings on the SETTING page.

Upload the current setting to sensor(s)

1. After setting all parameters (except SmartDIM level) in the SETTING page, go to UPLOAD page.
2. Select CURRENT SETTING and press  to confirm.
3. Aim at the target sensor and press  again to upload. Hold the remote in position until LCD display one of the below.

- **UPLOAD OK** Upload succeed. The connected light will flash to acknowledge a successful upload. Do NOT execute any upload/download operation while flashing.

- **UPLOAD FAIL** The IR communication may have failed due to sudden obstruction, interruption or misalignment. Ensure no obstacle is blocking the sensor and remote, try again.

- **SENSOR UNMATCHED** The upload setting is not available on the target sensor. If so, download the current settings from the sensor and change with new parameters, then upload again.



NOTE


SmartDIM level can only be set and changed via SETTING operation. Please refer to the section of **“Set/Change the SmartDIM level”**.

DOWNLOAD

The download function allows you to check the settings of an installed sensor and the current dim level of the connected lighting.



Download the sensor settings

1. Enter the DOWNLOAD page. Select SETTING and press .
2. Aim at the sensor and press  again. Hold the remote in position for about 10 seconds until LCD display one of the below;



- **DOWNLOAD OK** Download successful. Press  to review the settings.

- **DOWNLOAD FAIL** The IR communication may have failed due to sudden obstruction, interruption or misalignment. Ensure no obstacle is blocking the sensor and remote, try again.

Duplicate the sensor settings from one to another

1. Download the settings from a configured sensor.
 - NOTE:** Check if all settings are correct by scrolling the SETTING page prior duplication.
2. Go to the UPLOAD page. Select CURRENT SETTING and press  to confirm.
3. Aim at the target sensor and press  again to upload the settings as instructed.

Download the current dim level

1. Enter the DOWNLOAD page. Select CURRENT DIM and press .
2. Aim at the sensor and press  again. LCD will display the percentage of current lighting output.

CONFIGURATION TABLE

The following table highlights all settings and options available for SRP-280 to configure. Certain settings and parameters may not be available on specific type of sensor with specific control mode selected. For the available settings and options of specific sensor, please refer to the installation instruction of the sensor.

Settings	Description	Setting Options
CONTROL	The mode that the sensor will control.	ON/OFF, OSO, OSLA, OSLATO, DSVM, DSC, VSC, OFF
AMBIENT LUX	The ambient light level that sensor will perform the control.	10/20/40/60/100/200/400 LUX/DISABLED
DELAY	The delay time that sensor will turn off or dim the light.	30 sec./1/3/5/10/15/20/30/60 min.
TIME OFF	The delay time that sensor will keep the light at low dim level after the OFF delay time elapsed.	10/30 sec./3/5/10/15/20/30/45/60 min.
HIGH DIM	The output level set to control the light during occupancy, or when ambient light is below the threshold for daylight sensor.	50/55/60/65/70/80/90/100%/SmartDIM
LOW DIM/ SmartDIM	The output level set to dim the light when space is vacant for bi-level control. Low dim setting will become SmartDIM bar if SmartDIM control is selected.	0/5/10/15/20/25/30/40%
RAMP UP	The speed of increasing the lighting output to HIGH DIM level.	INSTANT/SOFT/SLOW
FADE DOWN	The speed of decreasing the lighting output to LOW DIM level or off.	INSTANT/SOFT/SLOW
DALI POWER	Enable/disable the sensor to provide DALI bus power. NOTE: Only applicable on DALI sensor.	ENABLED/DISABLED
LED INDICATOR	Enable/disable the LED indicator of sensor.	ENABLED/DISABLED
VM-TB	Set the duration before Virtual Midnight. Only available with Daylight Sensor.	0.5/1/1.5/2/2.5/3/3.5/4/4.5/5/5.5/6HR
VM-TA	Set the duration after Virtual Midnight. Only available with Daylight Sensor.	0.5/1/1.5/2/2.5/3/3.5/4/4.5/5/5.5/6HR
SENSITIVITY	Set the sensitivity of occupancy sensor.	HIGH/NORMAL/LOW
ON DELAY	The delay time that sensor is set to turn on the load after occupant is detected or after the ambient light is below set threshold for daylight sensors. Not applicable for lighting control occupancy sensors.	OFF/10/20/30/40/60/90/120 sec.
BURN-IN	Set the duration for burn-in test. To conduct the burn-in test with uncertain duration, select MANUAL.	STOP/12/24/48/72/96HR/MANUAL
TEST (10-MIN)	The sensor will control the light as the mode selected and parameters configured, but with shorten delay times (10 seconds) for testing and function verification. Sensor will automatically return to its normal control after 10 minutes or whenever STOP command is given.	STOP/START
SAVE AS	Save the settings as an EZ-SET profile for future use.	EZ-SET 1, 2, 3, 4
RECALL	Recall the EZ-SET profile saved.	DEFAULT, EZ-SET 1, 2, 3, 4
DEFAULT	Resume the factory default settings for REMOTE or SENSOR.	REMOTE/SENSOR
DEVICE INFO	Call out the information of REMOTE or SENSOR.	REMOTE/SENSOR