


## **ON-LRD-509** series

Line Voltage OS-NET Sensor

## **INSTALLATION INSTRUCTIONS**

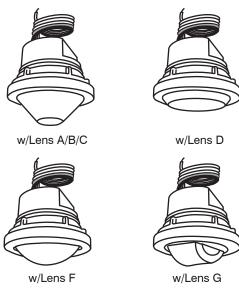

\*More lens options are available for this sensor. Please refer to the Lens Datasheet for more details.

## WARNING & CAUTION

- **Risk of Electric Shock Disconnect power supply before** servicing.
- Do NOT touch the square window of infrared sensor under the lens assembly.
- Open Type Photoelectric Switches.
- Install this device in accordance with electrical codes and protect with circuit breaker.
- Install the sensor at least 1 ft. away from any occupant.

# AVERTISSEMENT & PRUDENCE

- Risque de choc électrique Débranchez l'alimentation avant l'entretien.
- Ne PAS toucher la fenêtre carrée de capteur infrarouge sous l'ensemble de l'objectif.
- Ouvrir Type commutateurs optoélectroniques.



The ON-LRD-509 series is a fundamental device of OS-NET wireless mesh network solution packed with multiple functionalities including occupancy/vacancy **OVERVIEW** sensing, daylight harvesting, bi-level StepDIM or continuous SmartDIM, and wireless network communication for top-notch intelligent lighting control.

Numerous design innovations allow this device to be flexibly integrated with an OEM luminaire, or mounted on the ceiling in a variety of options. Interchangeable lenses allow the sensor to be mounted at various heights with different detection patterns for all applications. All functionalities can be easily and intuitively configured by a 2-way remote programmer from the floor. With ON-LRD-509, you can effortlessly achieve energy efficient, code-compliant smart lighting control through a state-of-the-art wireless mesh network synchronously established while installing the OS-NET enabled lighting.

1. The sensor is more sensitive to the movements

"crossing" the detection zones than "toward" or

2. The closer the movement is to the sensor, the more

sensitive the sensor is. The higher the sensor is installed, the larger movement is required to be

4. The sensor cannot "see" the movements behind

obstacles, such as tall furniture, shelf, glass or partitions. Avoid placing the sensor where obstructions may block the sensor's line of sight.

5. The partition of workstation could block the sensor view to occupant movements, it is best to place the

sensor over the intersection of workstation. For large

avoid enveloping the sensor with a metallic enclosure.

open office, place multiple sensors so that there is

overlap coverage with each adjacent sensor.

6. To obtain optimal wireless communication range,

"away" the sensor unit. To obtain better sensitivity. avoid placing the sensor in line with occupant path.

**APPLICATION NOTES** 

detected.

activations.

-

•

X

• •

SPECIFICATIONS							
Power supply	120/230/277VAC, 50/60Hz						
Maximum Load	120VAC	230VAC	277VAC				
-Fluorescent Ballast/CFL	800/*500W(VA)	5A	1200/*750W(VA)				
-Incandescent/Halogen	800/*500W(VA)	5A	1200/*750W(VA)				
-Ballast Electronic (LED)	540/*500VA	5A	1200/*750VA				
Infrared sensor	Digital quad-element pyroelectric sensor						
Dim control	0-10V, $\pm$ 5%, isolated, max 25mA						
HIC protection	Max. 80A for 16.7msec.						
Wireless protocol	Modified Zigbee Light Link (ZLL)						
Radio frequency	2405~2480MHz						
Number of Channel	16ch						
Radio range	15/90 m @indoor/outdoor, open space						
Radio Power Output	6.98dBm						
Detectable speed	0.15 ~ 3 m/sec. (0.5~10 ft./sec.)						
Mounting height	Subject to the lens applied						
Detection range	As per lens applied and mounting height						
Remote range	Typ. 10 m (33 ft), indoor with no backlight						
Op. humidity	Max. 95% RH						
Op. temperature	-40°C~70°C (-40°F~158°F)						
Dimensions	Ø60 x H37mm (Ø2.36"x H1.45")						
*Max load for operating temperature at $55^{\circ}C \sim 70^{\circ}C(131^{\circ}F \sim 158^{\circ}F)$							

#### Federal Communication Commission Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

#### P/N: 058-50906-003 Printed in Taiwan

This product may be covered by one or more U.S. patents or patent applications Please visit www.irtec.com for more information.

www.irtec.com

#### FCC ID: NRIRS350900

-Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.


Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

### MOUNTING

This device can be integrated with a luminaire or mounted on the ceiling in various formats via specific mounting bracket. Please refer to the mounting instruction sheet separately attached for more details about mounting options available.

#### WIRING DIAGRAM

Non-dimmable Lighting (ON-OFF Switching only)

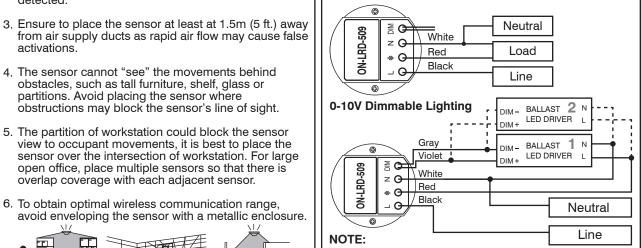

- 1. Use 0/1-10V dimmable driver/ballast to enable dimming control.
- 2. Ensure to connect the LINE and NEUTRAL wires correctly. Reverse connection may damage the sensor permanently.
- 3. Ensure TOTAL isolation between DIM+/DIM- and GROUND of line voltage to avoid damaging the sensor
- 4. Always conduct factory test with GROUND connected.

#### **OPERATION**

ĪB

X

The ON-LRD-509 employs a digital PIR sensor together with an ALS to detect occupancy status and ambient light level. The sensor not only controls the connected lighting as programmed when it detects the presence of an occupant/vehicle, but also broadcasts an OCC signal to other devices of the group to activate the respective controls. Each sensor can be assigned to be member of maximum 4 groups for coordinated control.



SETTING			Programming Guide		ROL SCHEME	
All sensor settings can be configured, in individual or group basis, by an OS-NET			The ON	-LRD-509 series can be programmed to control the connected lighting in one of the schemes as below.		
Remote Program	nmer SRP-281. Following table highlights the setting items	s and options		Scheme	Description	
	N-LRD-509. For detailed setting operation, please refer to auide available for download from <u>www.irtec.com</u> .	the OS-NET		ON/OFF	This is a typical <b>occupancy sensing control</b> scheme. Lighting will be inhibited when the ambient light level is higher than the set threshold, regardless of occupancy or vacancy. When the ambient light level is lower than the set threshold, the controlled light will be automatically turned on once the sensor detects the presence of occupant, and turned off after the delay time elapsed.	
Settings	Description	Options (*Denotes fa	actory default)		NOTE: This scheme can be used with dimmable or non-dimmable lighting, but not for HID lighting.	
INDIV-SET	To setup an individual device		<b>·</b>	OSO	This is an <b>occupancy sensing control</b> scheme can be applied in areas that require 24-hour lighting. When space is vacant, the lights	
GROUP-SET	To setup all devices of the group with same settings				will be maintained at Low Dim level. Whenever space is occupied, lighting output will be increased to High Dim level or continuously regulated to maintain within the pre-set range by SmartDIM control.	
CONTROL	Control schemes available for OS-NET sensor.	OSB, OFF	/20/40/60/80/200/400/600/1000/2000/ <b>DISABLED</b> */		NOTE: Do NOT use this scheme to control non-dimmable lighting.     This is an occupancy sensing control scheme can be applied in spaces that require automatic lighting when the ambient light level is lower than the set threshold.     Lighting will be inhibited if the ambient light level is higher than the set threshold, regardless of occupancy or vacancy. When the	
AMBIENT LUX	Thresholds of ambient light level for OS-NET sensor to execute the control.	10/20/40/60/80/200/400/60 CURRENT				
DELAY	Delay time that sensor will turn off or fade down the light.	30 sec./1/3/5/10*/15/20/30/60 min.			ambient light level is lower than the set threshold, the sensor will automatically control the light at Low Dim level. When sensor detects the presence of an occupant, lighting output will be increased to the High Dim level or continuously regulated within the pre-set range	
TIME OFF	Delay time that sensor will keep the light at low dim level after the OFF delay time elapsed.	10/30 sec./3/5/10*/15/20/30	) sec./3/5/ <b>10</b> */15/20/30/45/60 min.		by SmartDIM control. After the delay time elapsed, lighting output will be reduced to Low Dim level or shut off if the ambient light is higher than the set threshold. NOTE: Do NOT use this scheme to control non-dimmable lighting.	
HIGH DIM	High dim is the output level set to control the light during occupancy, or when ambient light is lower than the threshold if daylight sensing scheme is selected.	50/55/60/65/70/80/90/100% SmartDIM*	%	OSLATO	This is an <b>occupancy sensing control</b> scheme can be applied in spaces that require maintaining Low Dim lighting for a period of time before shutting off. Lighting will be inhibited if the ambient light level is higher than the set threshold, regardless of occupancy or vacancy. When the	
LOW DIM/SmartDIM	Low dim is the output level set to dim the light when space is vacant for bi-level control. Low dim setting will become SmartDIM bar if SmartDIM control is selected.				ambient light level is lower than the set threshold, and any sensor detects the presence of occupant, lighting output will be increased to High Dim level or continuously regulated to maintain overall lighting level within the pre-set range by SmartDIM control. After the delay time elapsed, lighting output will be reduced to Low Dim level for a period of TIME OFF delay before shut off. <b>NOTE:</b> This scheme requires <b>dimmable</b> lighting to enable dimming control. If lighting is <b>non-dimmable</b> , there will be no dim control	
RAMP UP	Speed of lighting output increase.	INSTANT*/SOFT/SLOW			and the delay time will be extended with the TIME OFF (TO) delay.	
FADE DOWN	Speed of lighting output decrease.	INSTANT/SOFT*/SLOW		DSVM	This is a <b>daylight sensing control</b> scheme can be applied in spaces that require automatically dimming the lighting output to a low	
LED INDICATOR	Enable or disable the LED indicator of the sensor.	ENABLED*/DISABLED			level between a certain time before and after virtual midnight. Lighting will be inhibited if the ambient light level is higher than the set threshold. When the ambient light level is lower than the set	
VM-ТВ	Time duration BEFORE Virtual Midnight. Only available if DSVM is selected.		/1.5/2/ <b>2.5</b> */3/3.5/4/4.5/5/5.5/6 hour		threshold, the sensor will turn the light to High Dim level or continuously regulate the output to maintain overall lighting level within the pre-set range by SmartDIM control. Lighting output will be reduced to Low Dim level from a certain time before virtual midnight to a	
VM-TA	Time duration AFTER Virtual Midnight. Only available if DSVM is selected.	0.5/1/1.5/2/2.5/3/3.5/ <b>4</b> */4.5/5/5.5/6 hour			certain time after. NOTE: This scheme requires <b>dimmable</b> lighting to enable dimming control. If lighting is <b>non-dimmable</b> , all lights will remain on	
SENSITIVITY	Y Sensitivity of occupancy sensor. To disable the occupancy sensing capability, select OFF.		DSC	whenever ambient light level is lower than the set threshold. This is a <b>daylight sensing control</b> scheme can be applied in spaces that require automatic lighting whenever the ambient light is lower than the set threshold.		
	CKNOWLEDGEMENT cknowledge setting success or failure with different indica	tions by device LED or	r connected lighting.		The sensor will automatically turn on the light to High Dim level or continuously regulate the output to maintain overall lighting level within the pre-set range by SmartDIM control when the ambient light level is lower than the set threshold, and automatically turn off the light when the ambient light level is higher than the set threshold. <b>NOTE:</b> This scheme requires <b>dimmable</b> lighting to enable dimming control. If lighting is <b>non-dimmable</b> , all lights will remain on whenever ambient light level is lower than the threshold.	
INDICATION	ACKNOWLEDGEMENT	REMARKS		VSC	This is a <b>vacancy sensing control</b> scheme can be applied in spaces that require users to manually turn on the light, and have the	
Device LED fast blinking in GREEN and BLUE. The device is scanning and linking to the network. The fast blinking (on-off per 0.2 second) only appears during network linking.					sensor turn off the light automatically. The occupant would have to press the OS-NET Button to turn on the lighting group assigned. The sensor will control the lights at High Dim level or continuously regulate the output to maintain overall lighting level within the pre-set range by SmartDIM control. The sensor	
Device LED blinks twic GREEN or BLUE.		BLUE means the device			will control the connected lighting as per OSLATO scheme. <b>NOTE:</b> This scheme requires <b>dimmable</b> lighting to enable dimming control. If lighting is <b>non-dimmable</b> , there will be no dim control	
Device LED blinks twice every 2-second for The device is set with daylight sensing control. 5 minutes, and then 15-second after power (DSVM or DSC) BLUE means the device is unlinked.		OSB	and the delay time will be extended with the TIME OFF (TO) delay. This is an advanced <b>occupancy sensing control</b> scheme can be applied in open offices to provide background light level before the area of entire lighting group is vacant.			
applied. Image: Constraint of the setting of control command.   Device short beeps twice. Receiving a single setting or control command.   Device beeps one long and two short. The connected lights flash twice. 1. Multiple setting data UPLOAD successful.   2. GROUP LINK successful. 2. GROUP LINK successful.				Lighting will be inhibited if the ambient light level is higher than the set threshold, regardless of occupancy or vacancy. When the ambient light level is lower than the set threshold and the first occupant is detected by a grouped sensor, the output of sensor connected light will be increased to High Dim level or continuously regulated within the pre-set range by SmartDIM control during occupancy, and the unoccupied areas of entire lighting group will brighten up to Low Dim level as background light. The entire lighting group turns off after the last person leaves and delay time elapsed.		
The connected lights	s flash twice. 1. Factory default setting resumed. 2. SmartDIM setting completed.			OFF	NOTE: Do NOT use this scheme to control non-dimmable lighting.     This is a manual control scheme can be used when you need the light to be off for a certain period of time.     Once this scheme is set, all OS-NET controlled lighting will remain off until another scheme is selected.	
					www.irtec.com	