
TRANS REMOTE

LRD-509 series

Line Voltage SmartDIM Occupancy Sensor

INSTALLATION INSTRUCTIONS



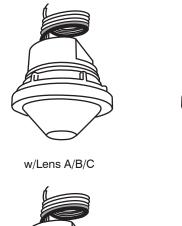

w/Lens F

w/Lens G/L

*More lens options are available for this sensor. Please refer to the Lens Datasheet for more details.

A WARNING & CAUTION

- Risk of Electric Shock Disconnect power supply before servicina.
- Do NOT touch the square window of infrared sensor under the lens assembly.
- Open Type Photoelectric Switches.
- Cycling the power to the sensors will cause failure over time.

OVERVIEW

The LRD-509 series member of the TRANS family is a two-way IR remote programmable line voltage switching occupancy sensor with 0-10V output for dimmable ballast or LED driver control. The sensor is capable of providing top-notch energy efficient lighting control in multiple modes with fully programmable multi-level high/low dim or SmartDIM control. SmartDIM is a state-of-the-art automatic dimming control technology developed by IR-TEC, which is capable of maintaining the overall ambient light level within the preset range through a smooth, flawless continuous dimming control to the connected lighting.

The sensor will turn on the connected lighting to the high dim or SmartDIM level as programmed when it detects the presence of an occupant or vehicle, and automatically dim the light down to the low level or shut off as programmed after the area is vacated for a period of time. An exclusive two-way handheld remote programmer, SRP-280, is required to configure sensor setting, or download the existing settings of the installed sensors from the floor. In addition, an exclusive Hybrid Switching technology makes the LRD-509 series perfect sensor to control a group of LED lightings with exceptionally high inrush current (HIC) while switching on.

Like all sensors in the TRANS family, the LRD-509 series is available with various mounting options and interchangeable lenses. This provides a second-to-none design and complete installation flexibility. The sensor is designed to operate in the coldest of environments, down to -40°C/°F.


A AVERTISSEMENT & PRUDENCE

- Risque de choc électrique Débranchez l'alimentation avant l'entretien.
- Ne PAS toucher la fenêtre carrée de capteur infrarouge sous l'ensemble de l'objectif.
- Ouvrir Type commutateurs optoélectroniques.

P/N: 058-50926-001 Printed in Taiwan www.irtec.com This product may be covered by one or more U.S. patents or patent applications.

APPLICATION NOTES

- 1. The sensor is more sensitive to the movements "crossing" the detection zones than "toward" or "away" the sensor unit. To obtain better sensitivity, avoid placing the sensor in line with occupant path, if possible.
- 2. The closer the movement is to the sensor, the more sensitive the sensor is. The higher the sensor is installed, the larger movement is required to be detected.
- 3. Ensure to place the sensor at least at 1.5m (5 ft.) away from air supply ducts as rapid air flow may cause false activations.
- 4 The sensor cannot "see" the movements behind obstacles, such as furniture, shelf, glass or partition. As a general rule, each occupant should be able to clearly view the sensor unit.
- 5. For open office areas with partition which could block the sensor view to occupant movements, it is best to place the sensors over the intersection of multiple workstations. For large areas of open office or space, place multiple sensors so that there is overlap coverage with each adjacent sensor.



MOUNTING OPTIONS

The sensor can be mouthed on the ceiling, or integrated with a lighting fixture in various formats via specific mounting bracket. Please refer to the mounting instruction sheet separately attached for more details.

LENS OPTIONS

Different lenses can be applied to provide specific coverage at different mounting heights. Please refer to the lens datasheet attached for more details.



Please visit www.irtec.com for more information.

CONTROL MODE The LRD-509 sensor can be programmed by SRP-280 remote programmer to control the lighting in one of the following modes. For more details of specific control mode, please visit					SENSOR SETTINGS The followings are settings and options available with LRD- remote programmer. For more details of remote sensor set		
www.irtec.com or contact an IR-TEC team member directly.			Settings	Description			
ON/OFF : ON-OFF Switching			CONTROL	The mode that the sensor will control.			
OSO : Occupancy Sensing Only OSLA : Occupancy Sensing at Low Ambient			AMBIENT LUX	The ambient light level that sensor will perform the			
OSLATO : Occupancy Sensing at Low Ambient with Time-Off					The delay time that sensor is set to turn off or dim The delay time that sensor will keep the light at low		
OFF : Light OFF all the time				delay time elapsed. Only available if OSLATO is se			
Mode		Control			HIGH DIM	The output level set to control the light during occ	
	1. While ambient lux is higher than the least of the state of the st			level set, light	LOW DIM/ SmartDIM	The output level set to dim the light when space is Low dim setting will become SmartDIM bar if Sma	
	stays OFF . 2. While ambient lux is lower than the leve		n the level s	evel set and	RAMP UP	The speed of increasing the lighting output to HIG	
ON/OFF		occupancy detected, switch the light to HIGH DIM.		FADE DOWN	The speed of decreasing the lighting output to LO		
	 Turn OFF the light after occupant leave and delay time elapses. 			R Enable/disable the LED indicator of sensor.			
			SENSITIVITY	The sensitivity of occupancy sensor.			
	1. Ambient light	sensor disabled.			MIN. DIM	The lowest dim level applicable on the sensor.	
OSO	 Dim the light to LOW DIM at all time under vacancy. Switch the light to HIGH DIM under occupancy. Dim the light to LOW DIM after occupant leave and delay time elapses. 		pancy.	DAY O'RIDE	Enable/disable daylight override control. Sensor w ambient lux exceeds the override level set below. LUX is enabled.		
			leave and	O'RIDE LEVEL	The ambient lux level to enable daylight override. O'RIDE is enabled.		
OSLA	 While ambient lux is higher than the level set, light stays OFF. While ambient lux is lower than the level set, dim the light to LOW DIM under vacancy. While ambient lux is lower than the level set, and occupancy detected, switch the light to HIGH DIM Dim the light to LOW DIM after occupant leave and delay time elapses. 				WIRING DIAGRAM Non-dimmable Lighting (ON-OFF Switching only)		
OSLATO	 While ambient lux is higher than the level set, light stays OFF. While ambient lux is lower than the level set, and occupancy detected, switch the light to HIGH DIM. Dim the light to LOW DIM after occupant leave and delay time elapses. Turn OFF the lights when TIME OFF delay elapses. When occupancy detected during TIME OFF, switch the light to HIGH DIM. 			set, and HGH DIM . leave and y elapses.	0-10V Dimmable Lighting		
OFF 1. All lighting controlled by the sensor will remain OFF until another mode is selected.							
SENSOR ACKNOWLEDGMENT							
Acknowledgement Sensor LED Beep Lighting		Lighting	NOTE:	Line			
Full sensor setting upload completed		-	Long x 1 Short x 2	Flash x 2	1. The driver/ dimming co	ballast MUST be 0-10V dimmable to achieve ontrol.	
<u> </u>			L			anastian of LINE and NEUTRAL are not revored	

-

-

-

Flash x 1

Sensor resume to factory default

SmartDIM level set completed

Single setting ok


Occupancy detected

SENSOR SETTINGS

The followings are settings and options available with LRD-509 that can be configured through the operation of SRP-280 remote programmer. For more details of remote sensor setting, please refer to the operation instruction of SRP-280.

Settings	Description	Options	Default
CONTROL	The mode that the sensor will control.	ON/OFF, OSO, OSLA, OSLATO, OFF	OSLATO
AMBIENT LUX	The ambient light level that sensor will perform the control.	10/20/40/60/100/200/400 LUX/DISABLED	DISABLED
DELAY	The delay time that sensor is set to turn off or dim the light.	30 sec./1/3/5/10/15/20/30/60 min.	10 min.
TIME OFF	The delay time that sensor will keep the light at low dim level after the OFF delay time elapsed. Only available if OSLATO is selected.	10/30 sec./3/5/10/15/20/30/45/60 min.	10 min.
HIGH DIM	The output level set to control the light during occupancy.	50/55/60/65/70/80/90/100%/SmartDIM	100%
LOW DIM/ SmartDIM	The output level set to dim the light when space is vacant for bi-level control. Low dim setting will become SmartDIM bar if SmartDIM control is selected.	0/5/10/15/20/25/30/40%	30%
RAMP UP	The speed of increasing the lighting output to HIGH DIM level.	INSTANT/SOFT/SLOW	INSTANT
FADE DOWN	The speed of decreasing the lighting output to LOW DIM level or off.	INSTANT/SOFT/SLOW	SOFT
LED INDICATOR	Enable/disable the LED indicator of sensor.	ENABLED/DISABLED	ENABLED
SENSITIVITY	The sensitivity of occupancy sensor.	HIGH/NORMAL/LOW	HIGH
MIN. DIM	The lowest dim level applicable on the sensor.	12%/15%/DISABLED	DISABLED
DAY O'RIDE	Enable/disable daylight override control. Sensor will shut off the light when ambient lux exceeds the override level set below. Only available if AMBIENT LUX is enabled.	ENABLED/DISABLED	DISABLED
O'RIDE LEVEL	The ambient lux level to enable daylight override. Only available if DAY O'RIDE is enabled.	HIGH/NORMAL/LOW	NORMAL

WIRING DIAGRAM

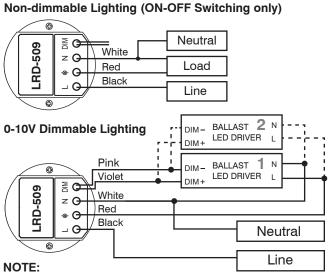

2. Ensure connection of LINE and NEUTRAL are not reversed

3. Ensure TOTAL isolation between DIM+/DIM- and GROUND

SPECIFICATIONS

Power supply	100/120/230/277VAC, 50/60 Hz				
Maximum load	100-120VAC	230VAC	277VAC		
-Incandescent/Halogen	800/*500W(VA)	5A	1200/*750W(VA)		
-Fluorescent Ballast/CFL	800/*500W(VA)	5A	1200/*750W(VA)		
-Ballast Electronic (LED)	540/*500VA	5A	1200/*750VA		
Infrared sensor	Omni-directional pyroelectric				
Photo sensor	Digital ambient light sensor				
HIC protection	Max. 80A for 16.7msec.				
Dim control output	0-10V, ±5%, isolated, max. 25 mA				
Detectable speed	0.3~3 m/sec. (1~10 ft./sec.)				
Mounting height	Subject to the lens type applied.				
Detection range	Subject to the lens type and mounting height				
Remote range	10 m (33 ft.) indoor, no backlight				
Op. humidity	Max. 95% RH				
Op. temperature	-40°C~70°C (-40°F~158°F)				
Dimensions	Ø60 x H37 mm (Ø2.36"x H1.45")				
*Max load for operating temperature at 55°C~70°C (131°F~158°F)					

to avoid damaging the sensor. 4. Conduct test with GROUND connected.

to avoid damaging the sensor.

Flash x 2

Flash x 2

-

-

_

Short x 2

Short x 2

-